





ZINKO

Hydraulic Jack

ZHP-41 & ZHP-42 Parts Breakdown

Toll Free: 1-800-579-8088 Web: www.zinko.com

REV 100120 page 1 of 1

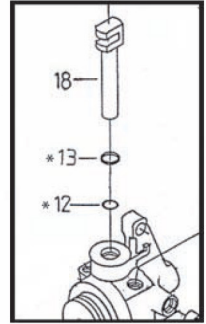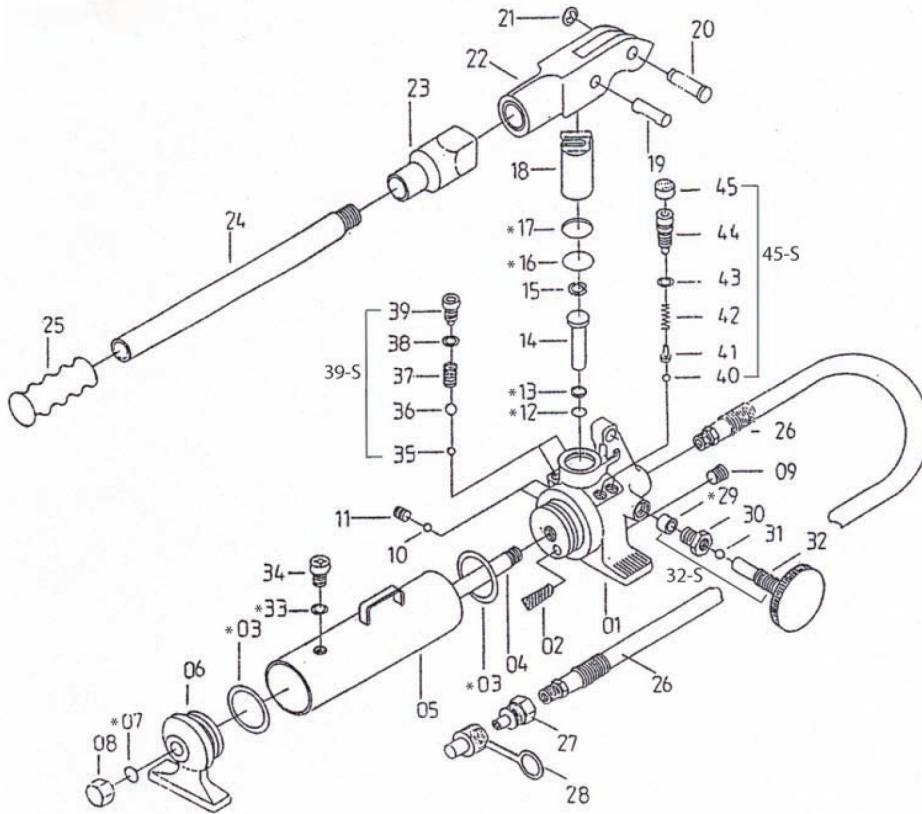

ZHP-41

ZHP- 41	ZHP- 42	Description	ZHP- 41	ZHP- 42	Description	ZHP- 41	ZHP- 42	Description
1	1	Pump Housing	18	18	Pump Piston	35	35	Ball Valve (small)
2	2	Oil Filter	19	19	Pin	36	36	Ball Valve
3	3	O-Ring*	20	20	Pin	37	37	Spring
4	4	Screw	21	21	Cir Clip	38	38	Washer
5	5	Oil Pot	22	22	Pump Pivot Arm	39	39	Screw
6	6	Frame	23	23	York Grip	40	40	Ball Valve
7	7	O-Ring*	24	24	Handle	41	41	Spring Guide
8	8	Bushing	25	25	Handle Grip	42	42	Spring
9	9	Screw	26	26	Hose	43	43	O-Ring
10	10	Ball Valve	27	27	Coupler	44	44	Setting Bolt
11	11	Screw	28	28	Coupler Dust Cap	45	45	Pressure Setting Cap
12	12	O-Ring*	29	29	Oil Seal*	32-S	32-S	Including #29 ~ 32
13	13	Back-up Ring*	30	30	Nut	39-S	39-S	Including #35 ~ 39
---	14	Pump Piston	31	31	Ball Valve	45-S	45-S	Including #40 ~ 45
---	15	C Clip	32	32	Release Valve	Repair Kits 923-042-RP		Including #3, 7, 12, 13, 16, 17, 29, 32
---	16	O-Ring*	33	33	O-Ring*			
---	17	Back-up Ring*	34	34	Air Valve Body			