




# ZHP-90 Parts Breakdown

Toll Free: 1-800-579-8088 Web: www.zinko.com

REV 110116 page 1 of 1

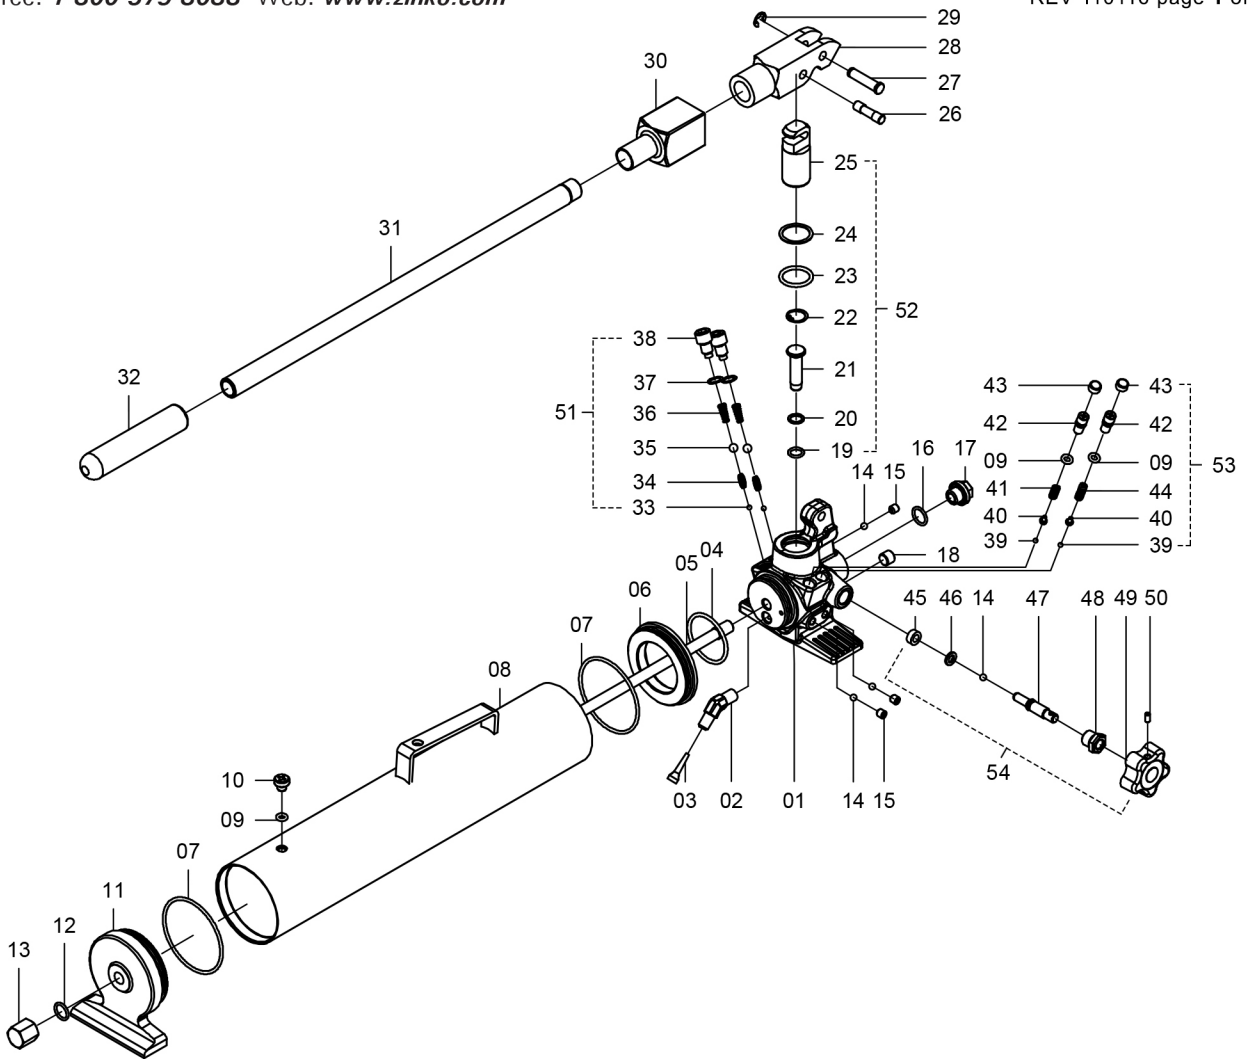

No.	Description	No.	Description	No.	Description
1	Pump Housing	20	Backup Ring*	39	Check Ball
2	45° Elbow	21	Pump Piston	40	Spring End Cap
3	Oil Filter	22	Snap Ring*	41	Short Sep. Spring
4	O-Ring*	23	O-Ring*	42	Overload Cover Spring
5	Screw	24	Backup Ring*	43	Cap
6	Head Base	25	Pump Piston	44	Long Sep. Spring
7	O-Ring*	26	Piston Pin	45	Oil Seal
8	Reservoir	27	Yoke Pin	46	Washer
9	O-Ring*	28	Yoke	47	Release Nut
10	Air Release Screw	29	Retaining Pin	48	Release Valve Screw
11	Tail Base	30	Yoke Cover	49	Release Knob
12	O-Ring*	31	Handle	50	Set Screw
13	Nipple	32	Handle Grip	51	Pressure Valve Kit
14	Check Ball	33	Check Ball	52	Plunger Kit
15	Set Screw	34	Spring	53	Relief Valve Pressure Kit
16	O-Ring*	35	Check Ball	54	Release Valve Kit
17	Screw	36	Spring	55	Repair Kit (*)
18	Screw	37	Washer		
19	O-Ring*	38	Valve Cover Screw		