



### ZMHL-4SP (910040T-)

#	Description
F1	Flat Base
R1	Round Base
2	1/4 Steel Ball
3	*Oil Seal for Release Valve
4	Release Valve Spindle
5	Valve Set
6	*Pump Cylinder O-Ring
7	Pump Cylinder Cup Washer
8	Pump Cylinder
9	*Pump O-Ring & Backup Ring
10	Handle Socket Assembly
11	Piston
12	Set Pin
13	Link Pin
14	Filter Screw & O-Ring
15	Oil Chamber Washer (top)
16	Collar Ram
17	*Cup Ring
18	*Backup Ring
19	Ram
20	Cylinder
21	*Oil Chamber Washer (bottom)
22	Oil Chamber
23	Oil Plug
24	*Ram Sealing O-Ring
25	Top Nut
26	Handle
RP	Repair Part Kit (All * Above)

### ZMHL-8SP (910080T-)

#	Description
F1	Flat Base
R1	Round Base
2	1/4 Steel Ball
3	*Oil Seal for Release Valve
4	Release Valve Spindle
5	Valve Set
6	*Pump Cylinder O-Ring
7	Pump Cylinder Cup Washer
8	Pump Cylinder
9	*Pump O-Ring & Backup Ring
10	Handle Socket Assembly
11	Piston
12	Set Pin
13	Link Pin
14	Filter Screw & O-Ring
15	Oil Chamber Washer (top)
16	Collar Ram
17	*Cup Ring
18	*Backup Ring
19	Ram
20	Cylinder
21	*Oil Chamber Washer (bottom)
22	Oil Chamber
23	Oil Plug
24	*Ram Sealing O-Ring
25	Top Nut
26	Handle
RP	Repair Part Kit (All * Above)