




ZPR Series Parts Breakdown

Toll Free: 1-800-579-8088 Web: www.zinko.com


REV 092507

ZPR-056

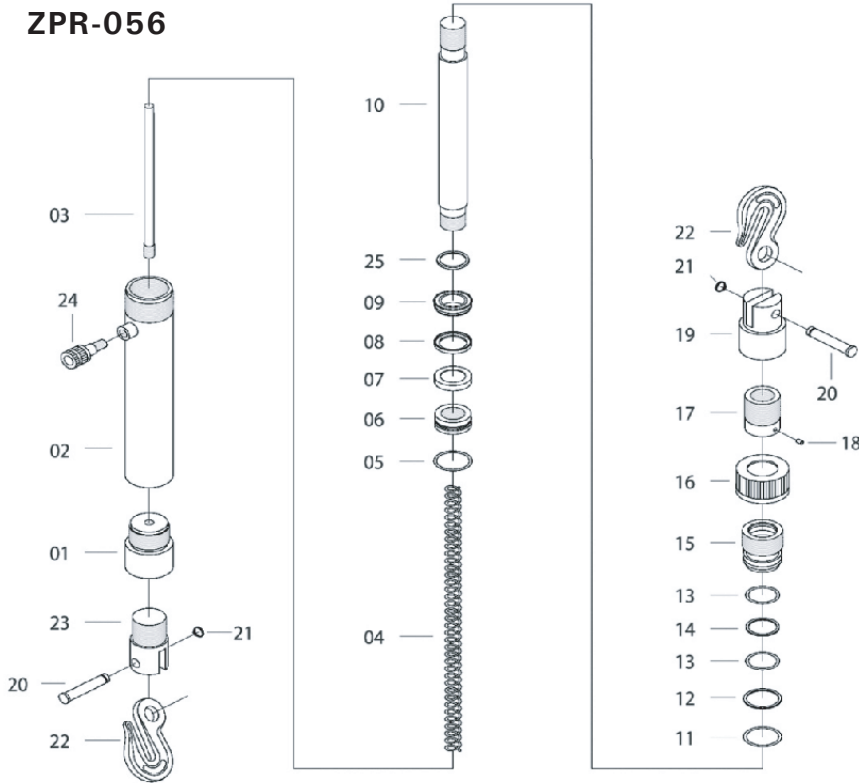

#	DESCRIPTION
01	Cylinder Base
02	Cylinder
03	Fixing Screw
04	Spring
05*	O-Ring
06	Bypass Bushing
07	Copper Bushing
08*	Back-Up Ring
09*	Cup Seal
10	Ram
11*	O-Ring
12*	Back-Up Ring
13*	O-Ring
14*	Back-Up Ring
15	Fasten Nut
16	Ram Sleeve
17	Adapter
18	Set Screw
19	Hook Connector
20	Pin
21*	Snap Ring
22	Hook
23	Hook Connector
24	Coupler
25	Washer
RP	Repair Kit (All Parts with*)

ZPR-106

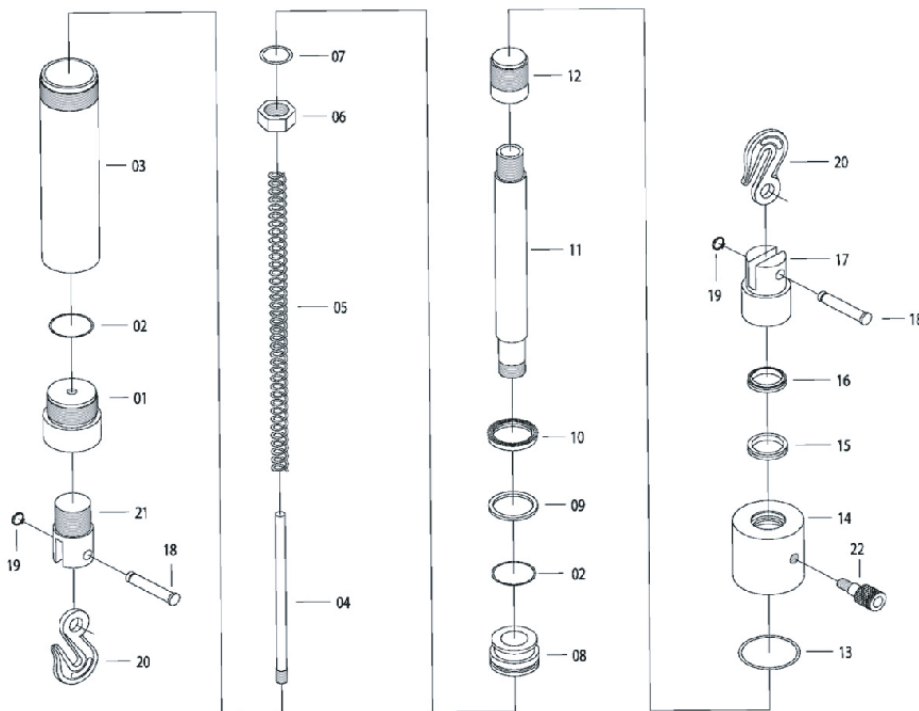

#	DESCRIPTION
01	Cylinder Base
02*	O-Ring
03	Cylinder
04	Fixing Screw
05	Spring
06	Nut
07*	O-Ring
08	Bypass Bushing
09*	Back-Up Ring
10*	Cup Seal
11*	Ram
12	Adapter
13*	O-Ring
14	Cylinder Top
15*	Cup Seal
16*	Wiper Seal
17	Hook Connector
18	Pin
19*	Snap Ring
20	Hook
21	Hook Connector
22	Coupler
RP	Repair Kits (All Parts with*)