



ZAR-023

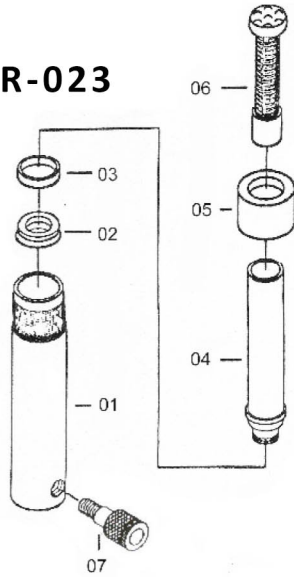


#	Description
1	Cylinder
2	*Cap Seal
3	*Brass Bshing
4	Ram
5	Bolt
6	Screw and Nut
7	Coupler
RP	Repair Lits (*)

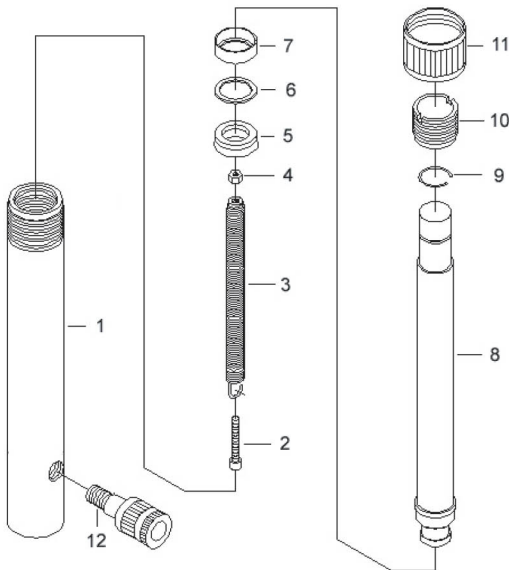

ZAR-045SP

#	Description	#	Description
1	Cylinder	7	Brass Bushing
2	Screw	8	Piston Rod
3	Spring	9	Spring Ring
4	Nut	10	Fasten Nut
5	Bushing	11	Ram Sleeve
6	Backup Ring	12	Coupler

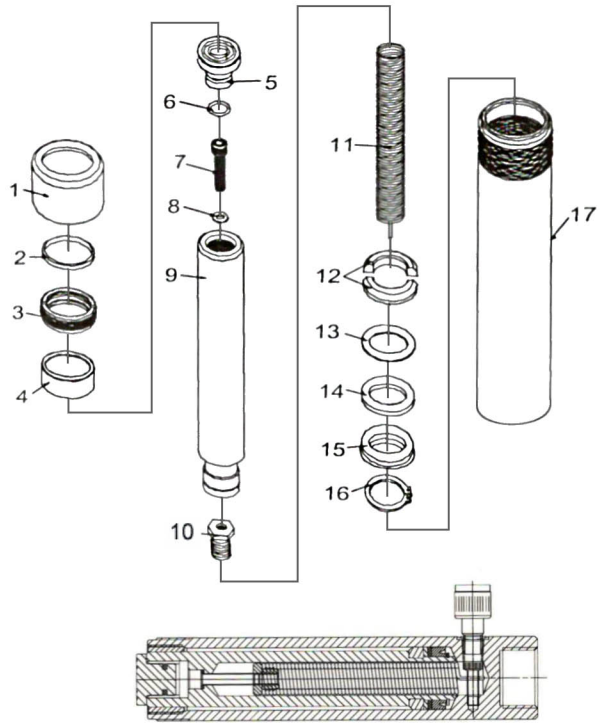

ZAR-106T & ZAR-1010T

#	Description	#	Description
1	Thread Cover	10	Seating Nut
2	Wiper	11	Spring
3	Bearing Stop Ring	12	Rod Bearing
4	Bearing Sleeve	13	Washer
5	Saddle	14	Bearing
6	Stop Ring	15	U-Cup
7	Screw	16	C-Ring
8	Washer	17	Cylinder
9	Plunger		