



#	Description
1	Hydraulic Pump
2	Oil Cover Base
3	Oil Tube
4	Axle
5	Base Axle
6	Operation Axle
7	Hand Bar Bush
8	Piston
9	Piston Ring
10	*Backup Ring
11	*O-Ring
12	*Backup Ring
13	*O-Ring
14	*Filter

#	Description
15	*O-Ring
16	Bolt
17	Spring
18	Washer
19	Steel Ball
20	Spring
21	Steel Ball
22	Valve Bar
23	Release Screw
24	*O-Ring
25	Release Valve
26	*O-Ring
27A	Valve Set A
27B	Valve Set B

#	Description
27	Valve Cartridge
28	Steel Ball
29	Axle
30	Spring
31	Screw
32	Bolt
33	Axle
34	C-Ring
35	Screw
36	Handle Axle
37	Screw
38	*O-Ring
39	Silencer
40	Oil Inlet Bolt

#	Description
41	*O-Ring
42	C-Ring
43	Axle
44	Spring
45	Screw
46	*Filter
47	Screw
48	Spring
49	Stud
50	Backup Ring
51	Axle Bush
52	Axle Bush 2
53	Screw
RP	Repair Kits (All *)
RV	Release Assy